



THIS GUIDE IS FOR FITTING
V350B
CERAMIC FUEL EFFECT

CERAMIC COAL FUEL EFFECT INSTALLER AND USER GUIDE

IMPORTANT

THIS GUIDE MUST BE PLACED INSIDE OR ATTACHED TO THE INSTALLER AND OWNER GUIDE THAT WAS SUPPLIED WITH THE GAS FIRE. IT MUST BE LEFT WITH THE OWNER.

THIS GUIDE MUST BE READ IN CONJUNCTION WITH THE INSTALLER AND OWNER GUIDE THAT WAS SUPPLIED WITH THE GAS FIRE.

INSTALLER: PLEASE LEAVE THIS GUIDE WITH THE OWNER

INSTALLER AND OWNER GUIDE

VISION FIRES

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying), stored in any medium by electronic means (including in any retrieval system or database) or transmitted, in any form or by any means, whether electronic, mechanical, recording or otherwise, without the prior written permission of the copyright owner.

Warning: Any person who does any unauthorised act in relation to a copyright work may be liable to criminal prosecution and civil claims for damages.

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication

SAFETY

This product uses fuel effect pieces and burner compartment walls containing Refractory Ceramic Fibres (RCF), which are man-made vitreous silicate fibres. Excessive exposure to these materials may cause irritation to eyes, skin and respiratory tract. Consequently, it is important to take care when handling these articles to ensure that the release of dust is kept to a minimum. To ensure that the release of fibres from these RCF articles is kept to a minimum, during installation and servicing we recommend that you use a HEPA filtered vacuum to remove any dust and soot accumulated in and around the fire before and after working on the fire. When replacing these articles we recommend that the replaced items are not broken up, but are sealed within a heavy duty polythene bag, clearly labelled as RCF waste. RCF waste is classed as a stable, non-reactive hazardous waste and may be disposed at a landfill licenced to accept such waste. Protective clothing is not required when handling these articles, but we recommend you follow the normal hygiene rules of not smoking, eating or drinking in the work area and always wash your hands before eating or drinking.

This appliance does not contain any component manufactured from asbestos or asbestos related products.


INSTALLER AND OWNER GUIDE

FITTING THE CERAMIC COAL FUEL EFFECT

The ceramic fuel effect may cause staining / discolouration to decorative surfaces. It is therefore advisable to protect decorative surfaces.

Note: Depending upon model the detail around the ceramic fuel effect may be different to that shown.

1. Place the ceramic base coal in the burner compartment. The bottom rear face of the coal should rest on the angled ledges at the back of the burner compartment. The bottom front recess edges on the coal base should locate against the tags at the front of the ceramic support (See figure 1).

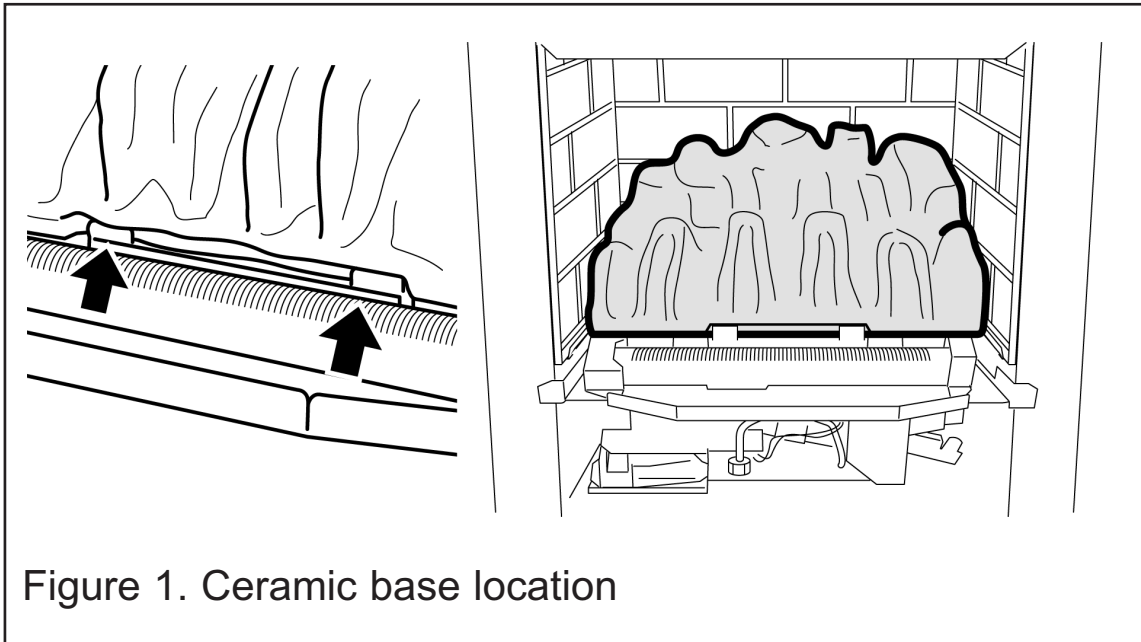

INSTALLER AND OWNER GUIDE

2. Ensure that the burner tray trim is fitted correctly and pushed fully down into position. Place ceramic front coal in position in front of the base coal. The underside of the front coal should locate in the recess below the burner tray trim (See figure 2).

3. It is important that the front ceramic piece is positioned correctly and does not cover the burner ports in any way.

Install the 9 loose coals as follows. The underside of each coal is marked with a letter 'A' to 'I' and an arrow.

The coals should be positioned so that the arrows always point towards the back of the firebox. When located into position the stem of each arrow should be at 90° to the rear of the firebox.

Locate coals 'A' to 'E' so that they are firmly seated in the valleys in the coal base and the rear face of the front coal.

4. Hold coal 'A' upright with the arrow pointing to the top. Locate coal 'A' as shown in figure 3.

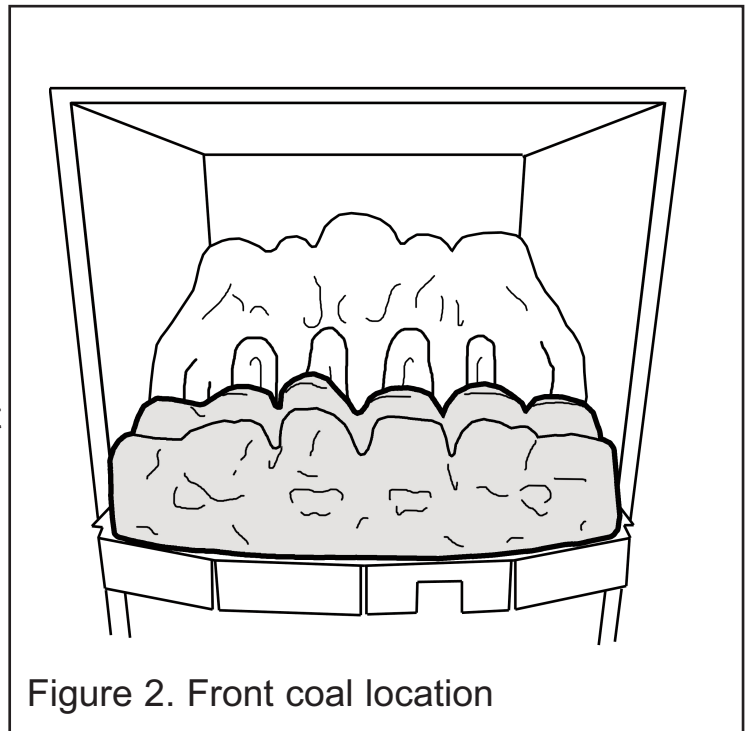


Figure 2. Front coal location

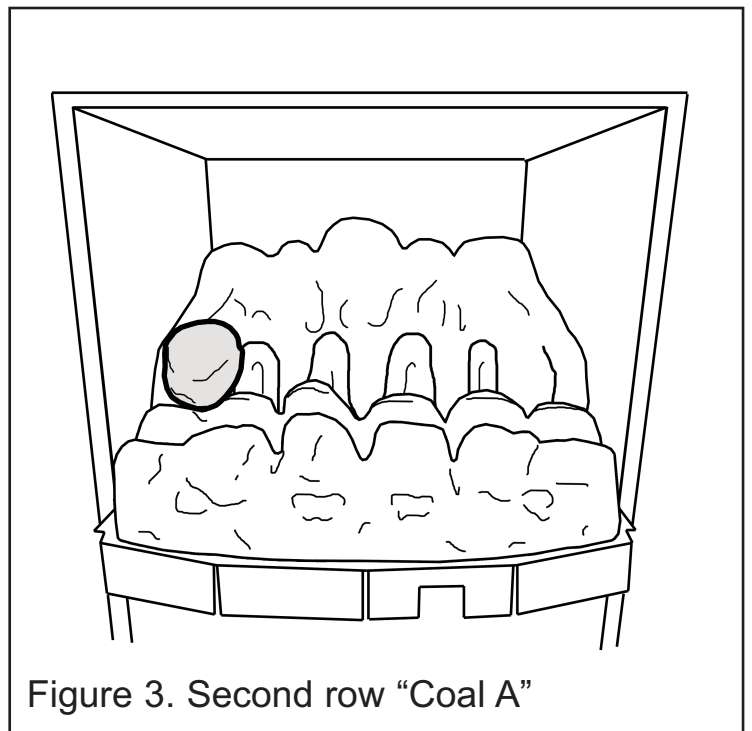


Figure 3. Second row "Coal A"

INSTALLER AND OWNER GUIDE

5. Hold coal 'B' upright with the arrow pointing to the top. Locate coal 'B' as shown in figure 4.

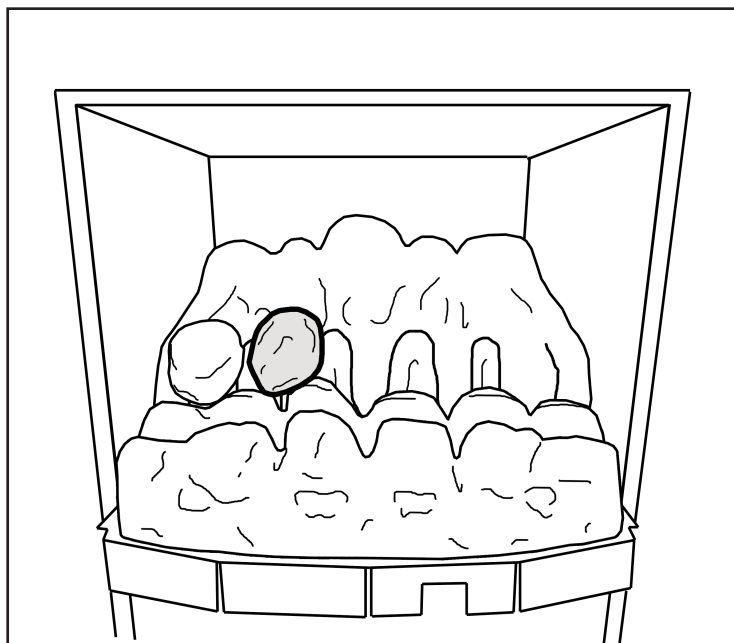


Figure 4. Second row "Coal B"

6. Hold coal 'C' upright with the arrow pointing to the top. Locate coal 'C' as shown in figure 5.

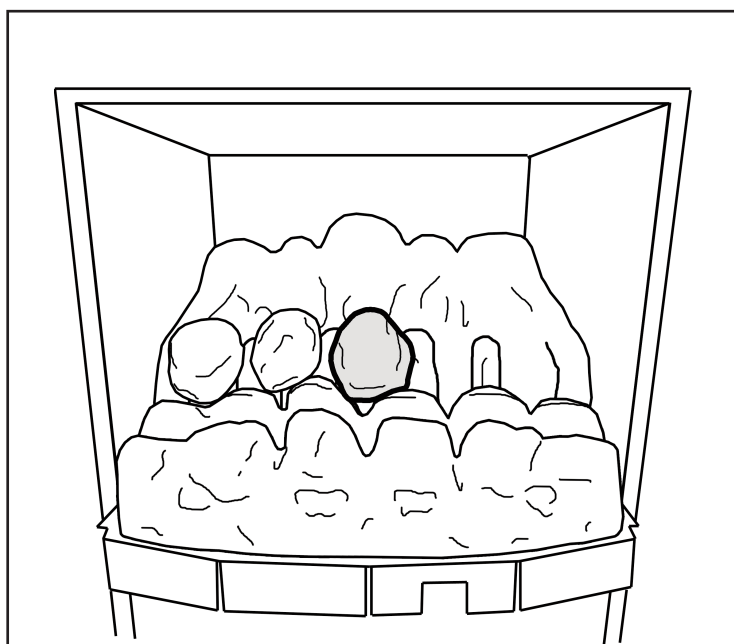


Figure 5. Second row "Coal C"

INSTALLER AND OWNER GUIDE

7. Hold coal 'D' upright with the arrow pointing to the top. Locate coal 'D' as shown in figure 6.

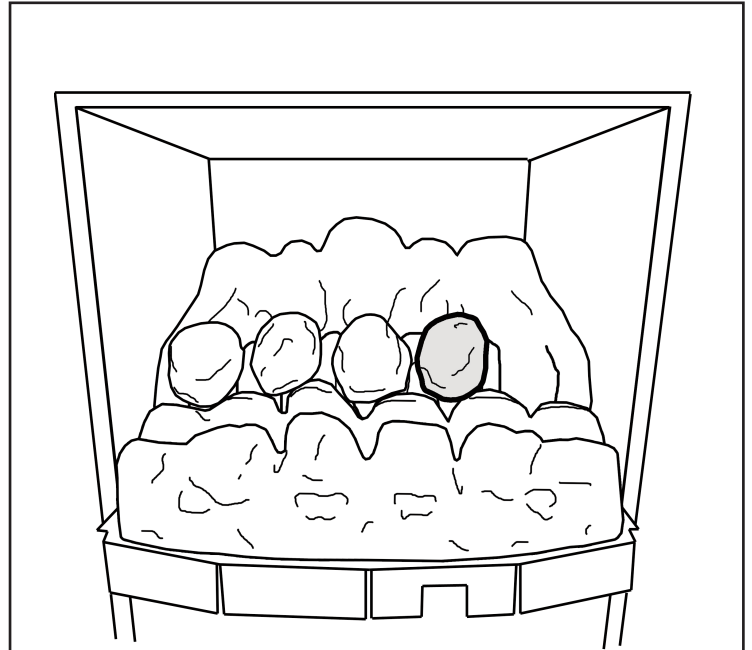


Figure 6. Second row "Coal D"

8. Hold coal 'E' upright with the arrow pointing to the top. Locate coal 'E' as shown in figure 7.

This will complete the second row of loose coals.

Locate coals 'F' to 'I' so that they are firmly seated in the valleys in the coal base.

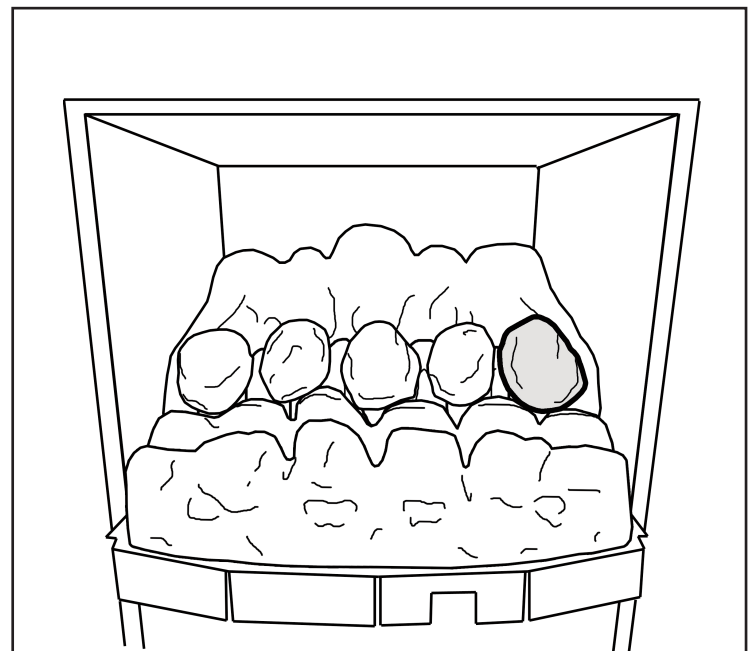


Figure 7. Second row "Coal E"

INSTALLER AND OWNER GUIDE

9. Hold coal 'F' upright with the arrow pointing to the top. Locate coal 'F' as shown in figure 8.

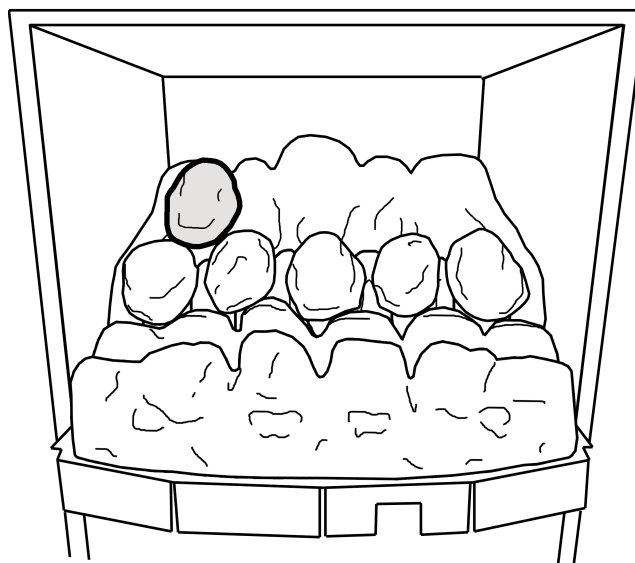


Figure 8. Third row "Coal F"

10. Hold coal 'G' upright with the arrow pointing to the top. Locate coal 'G' as shown in figure 9.

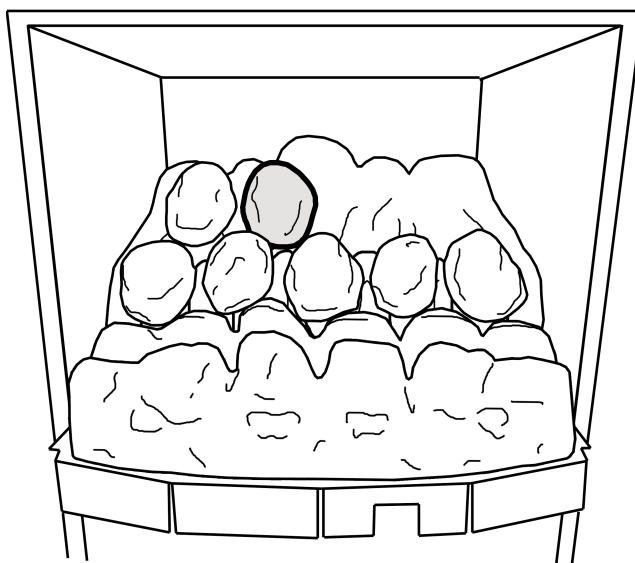


Figure 9. Third row "Coal G"

INSTALLER AND OWNER GUIDE

11. Hold coal 'H' upright with the arrow pointing to the top. Locate coal 'H' as shown in figure 10.

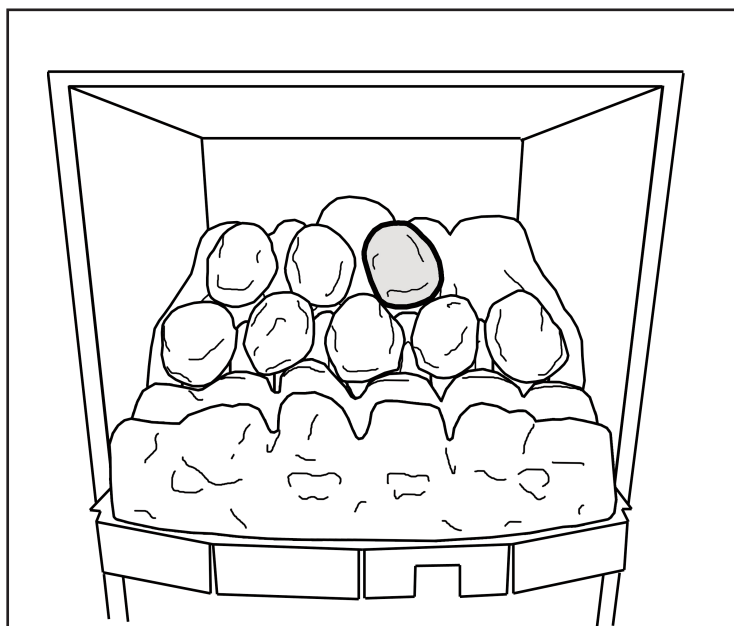


Figure 10. Third row "Coal H"

12. Hold coal 'I' upright with the arrow pointing to the top. Locate coal 'I' as shown in figure 11.

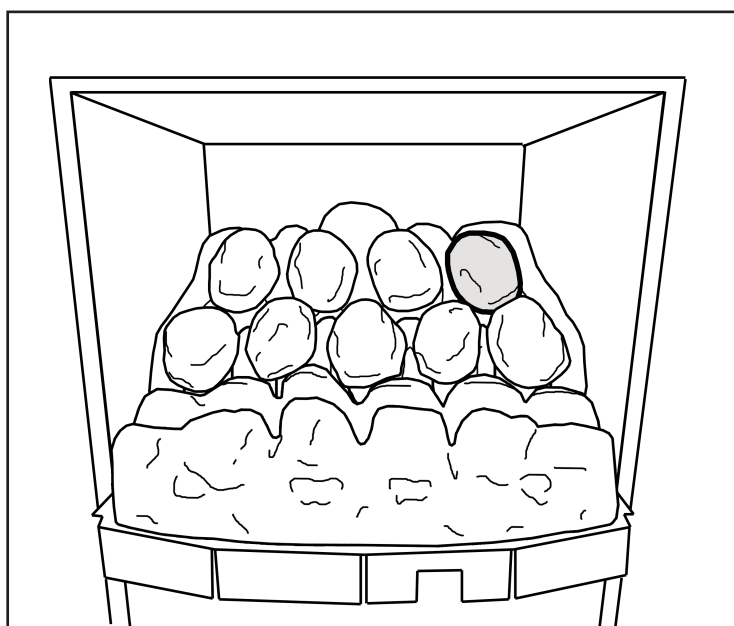


Figure 11. Third row "Coal I"